# Touchscreen & Audio System Removal – Safety and Procedure Guide

### **Important Notes:**

- Always wear anti-static gloves when handling electronic components.
- Store removed screws and parts in labeled containers to ensure efficient reassembly.
- Reconnect the negative battery terminal only after all installation or reinstallation procedures are complete.

## 1. Safety First – Battery Disconnection

Before beginning any disassembly or installation, it is critical to ensure electrical safety.

#### Steps:

- 1. **Disconnect the vehicle's battery** to prevent any electrical issues or short circuits.
- 2. Fold down the rear seats to access the trunk area.
- 3. Open the trunk.
- 4. **Remove the carpet** above the battery compartment.
- 5. Using a 10mm socket, loosen the nut securing the negative battery terminal.
- 6. **Disconnect the negative cable** from the battery.
- 7. **Ensure the trunk remains open** throughout the entire procedure to prevent being locked out.


# 2. Uninstall (2.1 -> Integrated Control Panel, 2.2 -> Touch Screen, 2.3 -> Audio Head Unit)

1. Remove the **door seal** on the relevant side.




Position the door seal to one side.


# 2. Remove the **instrument panel side trim panel**.

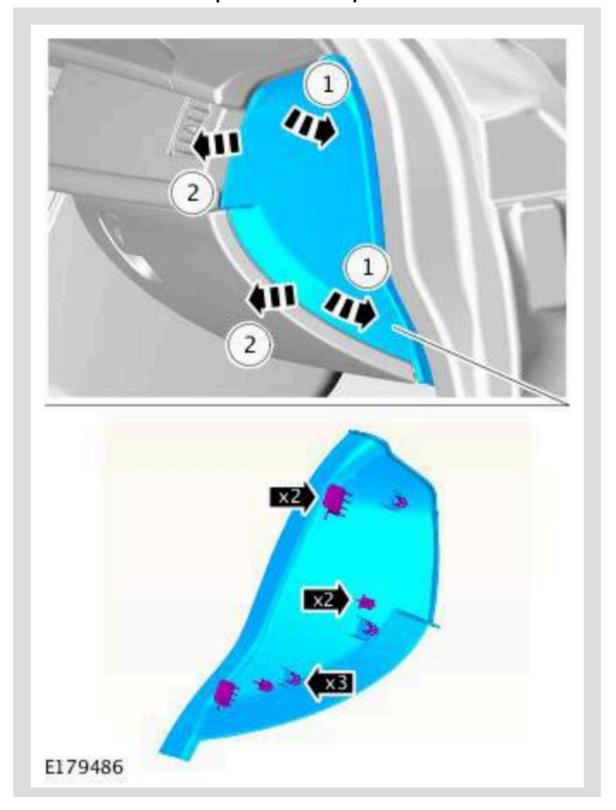


3. Remove the retaining screw. Lower the glovebox.

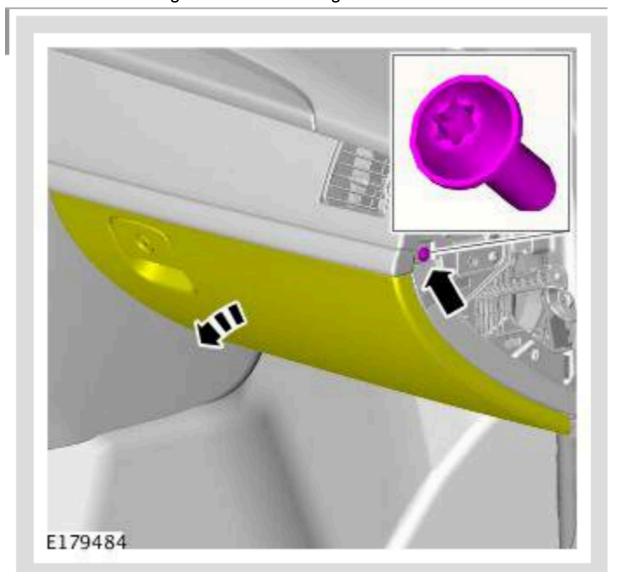


4. Remove the **2 retaining screws** from the **lower trim panel** (*Torque when reinstalling: 2.5 Nm*).

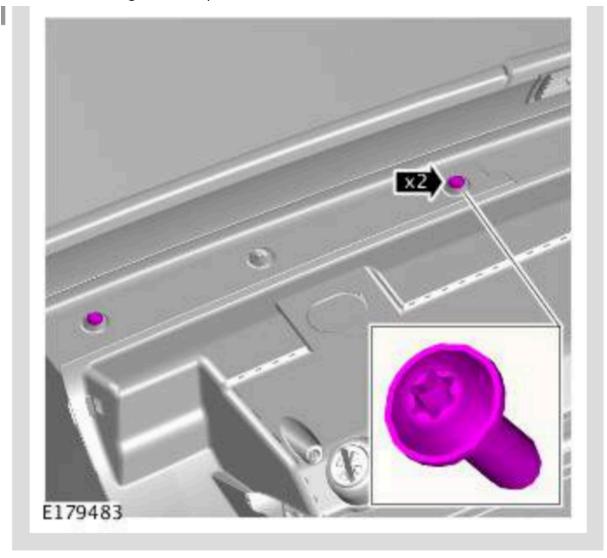


## 5. Remove the **lower trim panel**.

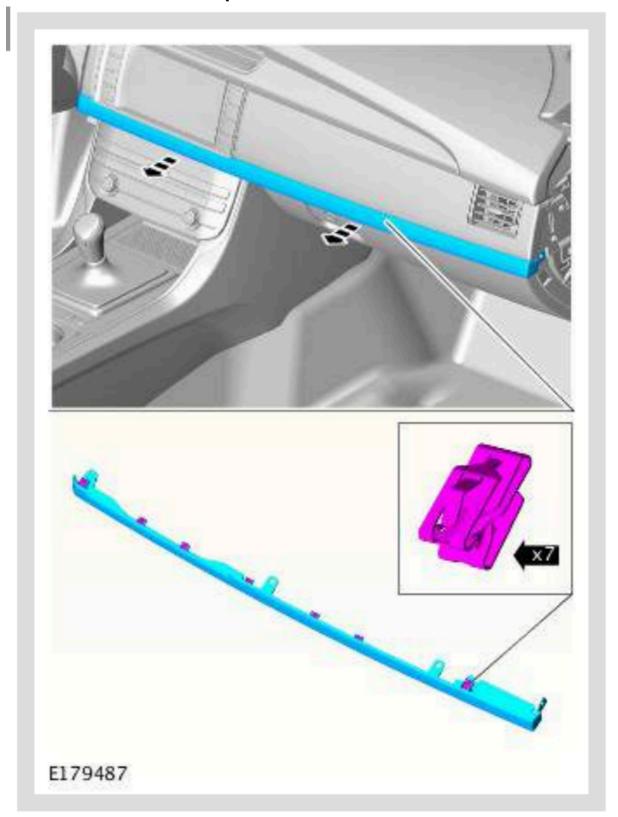


# 6.Remove the **upper trim panel**. There are no screw on upper trim panel

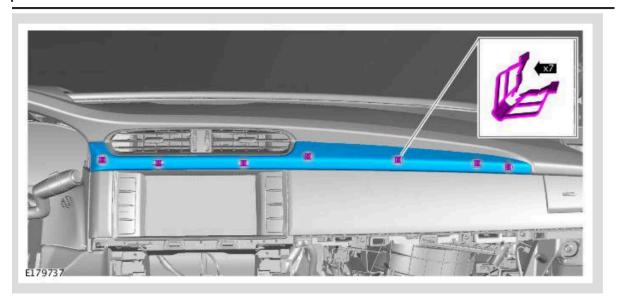


# 7. Remove the **Side trim panel retaining screw** (*Torque when reinstalling: 2.5 Nm*).

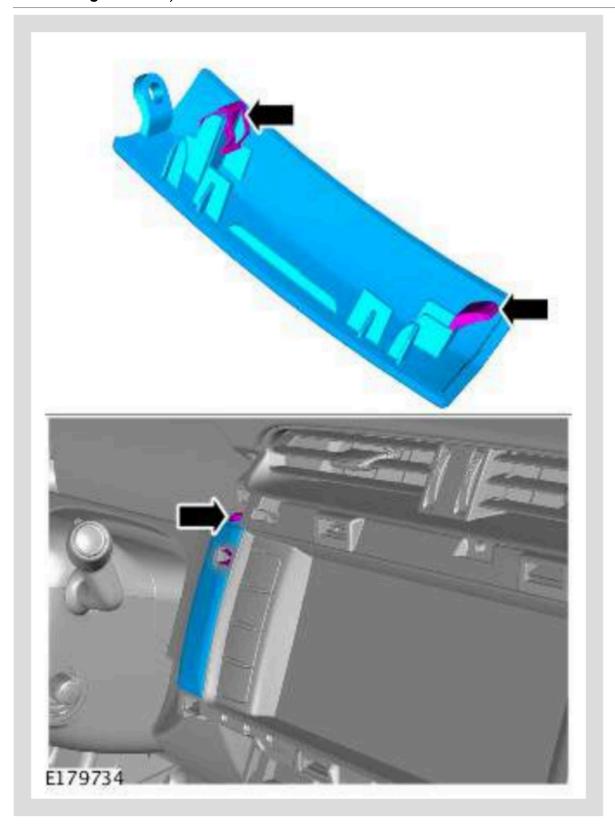


# 8. Remove the **middle trim panel** and its **7 retaining screws** (*Torque when reinstalling: 2.5 Nm*).

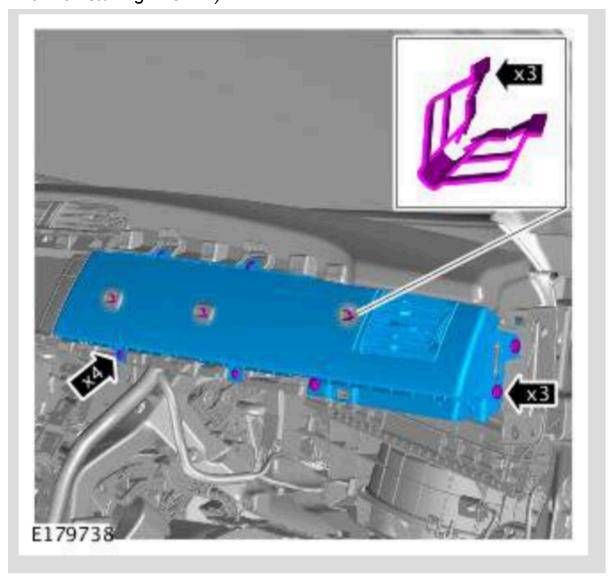


# 9. Remove the integrated control panel

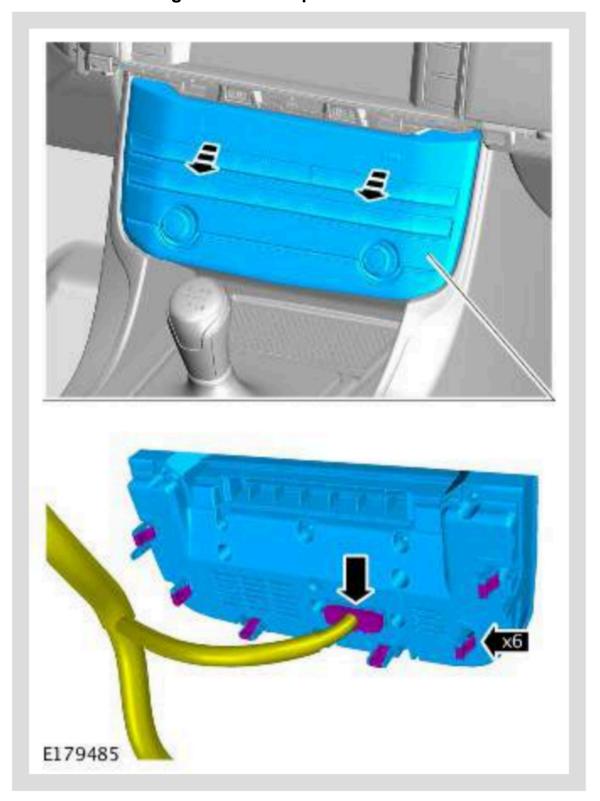

## 10. Remove the 5 retaining screws.

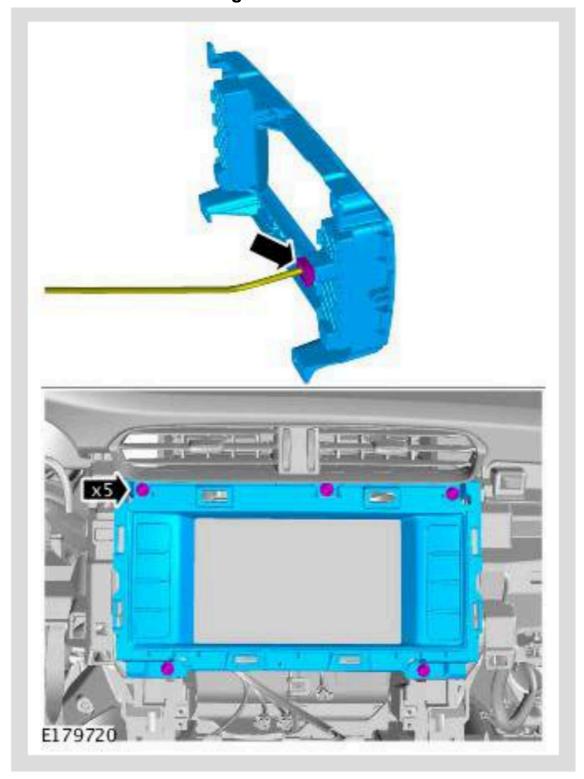


# 11. Remove the **touchscreen switchpack trim panel** (*Torque when reinstalling: 2.5 Nm*).

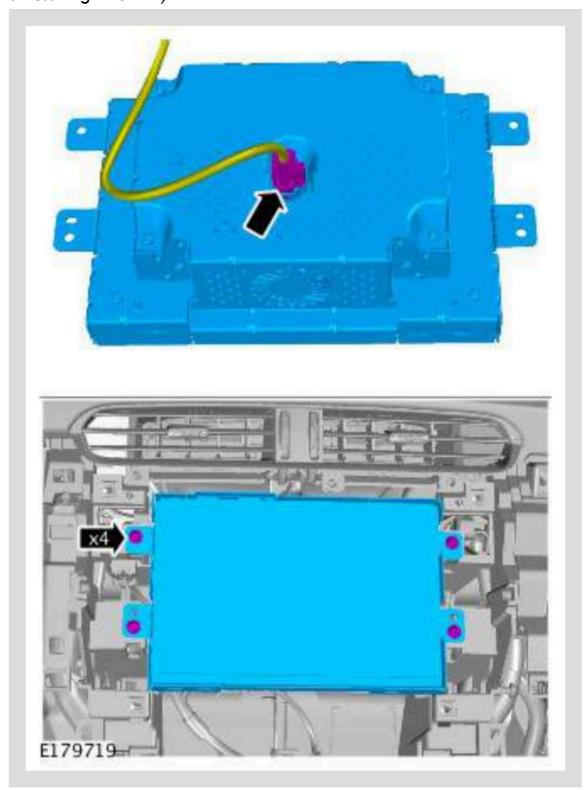

# 3. Remove the Audio Head Unit

### Steps:

1. Remove the 2 screws securing the audio head unit.

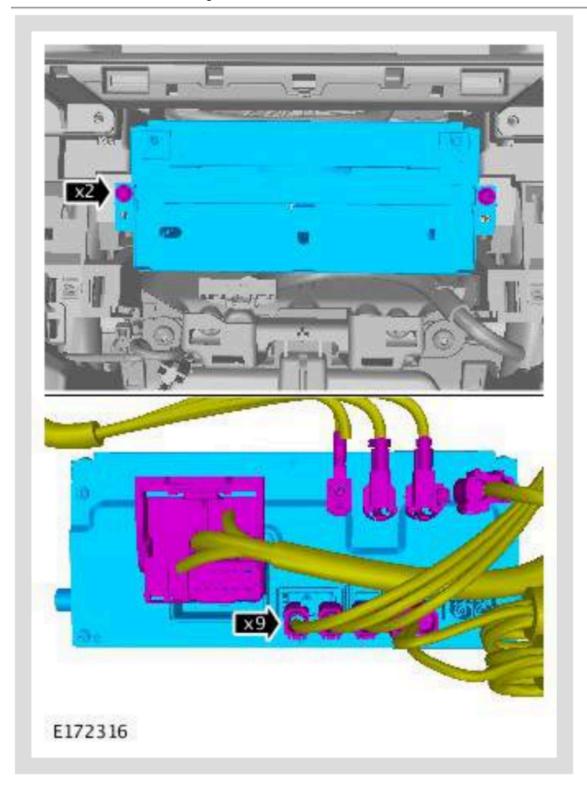

2. Gently pull the unit forward and disconnect all wiring harnesses and antenna connectors.

# Touchscreen & Audio System – Installation Procedure Guide

## 1. Preparation and Safety

Before beginning the installation:

- Ensure the vehicle's battery remains disconnected.
- Confirm all components (wiring harnesses, brackets, fasteners) are available and undamaged.
- Keep the trunk open during the entire procedure to prevent accidental locking.

### 2. Install the Audio Head Unit

- 1. Connect all wiring harnesses and antenna connectors to the audio head unit.
- 2. Position the unit correctly and secure it with 2 screws.

## 3. Reconnect the Battery

1. Reconnect the **negative battery cable** and tighten using a **10mm socket**.

### 4. Verification

- Turn on the ignition and check all systems: touchscreen, control panel, and audio unit.
- Confirm proper functionality of **buttons**, **display**, **and sound** output.

### 5. Install the Touchscreen Assembly

- 1. Install the touchscreen switchpack trim panel (*Torque: 2.5 Nm*).
- 2. Position and secure the **trim panel** with **7 retaining screws** (*Torque: 2.5 Nm*).
- 3. Install the **trim panel retaining screw** (*Torque: 2.5 Nm*).
- 4. Fit the upper trim panel.
- 5. Fit the **lower trim panel**.

- 6. Secure the **2 retaining screws** for the lower trim panel (*Torque: 2.5 Nm*).
- 7. Close the glovebox and install the **retaining screw** (*Torque: 2.5 Nm*).

## 6. Install the Integrated Control Panel

- 1. Install the **trim panel** over the integrated control unit.
- 2. Secure it using the 2 retaining screws (Torque: 2.5 Nm).
- 3. Close the glovebox and install the **retaining screw** (*Torque: 2.5 Nm*).

### 7. Reinstall Shared Interior Trims

- 1. Reinstall the instrument panel side trim panel.
- 2. Refit the door seal.

## 6. Final Steps

- 1. Ensure all trim panels are flush and secure.
- 2. Reposition the **carpet over the battery**.
- 3. Close the trunk and raise the back seats.
- 4. Reset the clock to the correct time
- 5. Start the engine and allow to idle until the engine reaches normal operating **temperature**..
- 6. Switch the engine off.

**Disclaimer:** Images used in this guide are sourced from the Jaguar XF X260 Workshop Manual (201x Edition) for educational and illustrative purposes only. All rights remain with the original copyright holders.